



Please DO NOT return product to the retail store.

For technical assistance and product return information, please call
Customer Care: **877-221-1252** Mon. - Fri. 8:00 A.M. to 4:45 P.M. (CST)

www.chaneyinstrument.com

LIMITED ONE YEAR WARRANTY

Chaney Instrument Company warrants that all products it manufactures to be of good material and workmanship and to be free of defects if properly installed and operated for a period of one year from date of purchase. REMEDY FOR BREACH OF THIS WARRANTY IS EXPRESSLY LIMITED TO REPAIR OR REPLACEMENT OF DEFECTIVE ITEMS. Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. In all cases, transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This warranty will not be breached, and Chaney will give no credit for products it manufactures which shall have received normal wear and tear, been damaged, tampered, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney.

THE ABOVE-DESCRIBED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ALL OTHER WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. CHANEY EXPRESSLY DISCLAIMS ALL LIABILITY FOR SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES, WHETHER ARISING IN TORT OR BY CONTRACT FROM ANY BREACH OF THIS WARRANTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. CHANEY FURTHER DISCLAIMS ALL LIABILITY FROM PERSONAL INJURY RELATING TO ITS PRODUCTS TO THE EXTENT PERMITTED BY LAW. BY ACCEPTANCE OF ANY OF CHANEY'S EQUIPMENT OR PRODUCTS, THE PURCHASER ASSUMES ALL LIABILITY FOR THE CONSEQUENCES ARISING FROM THEIR USE OR MISUSE. NO PERSON, FIRM OR CORPORATION IS AUTHORIZED TO ASSUME FOR CHANEY ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF ITS PRODUCTS. FURTHERMORE, NO PERSON, FIRM OR CORPORATION IS AUTHORIZED TO MODIFY OR WAIVE THE TERMS OF THIS PARAGRAPH, AND THE PRECEDING PARAGRAPH, UNLESS DONE IN WRITING AND SIGNED BY A DULY AUTHORIZED AGENT OF CHANEY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For in-warranty repair, please contact:

Customer Care Department
Chaney Instrument Company
965 Wells Street
Lake Geneva, WI 53147

Chaney Customer Care

877-221-1252
Mon-Fri 8:00 a.m. to 4:45 p.m. CST

www.chaneyinstrument.com



This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1- This device may NOT cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.



If at any time in the future you need to dispose of this product please note that: Waste electrical products should not be disposed together with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice

Patent numbers: 5,978,738; 6,076,044; 6,597,990

ACURITE®
DESIGNED TO WORK FOR YOU™

Alarm Clock
with Intelli-Time®
#13030

Instruction Manual


Package Contents:
(1) Alarm Clock
(1) Instruction Manual



Thank You for purchasing this ACURITE® product. This alarm clock features Intelli-Time® technology, which instantly sets the clock once the clock is plugged in. Please read this manual in its entirety to fully enjoy the benefits and features of this product. Please keep this manual for future reference.

NOTE: A clear film is applied to the display at the factory that must be removed prior to using this product. Locate the clear tab and simply peel to remove.

1 • OVERVIEW OF FEATURES

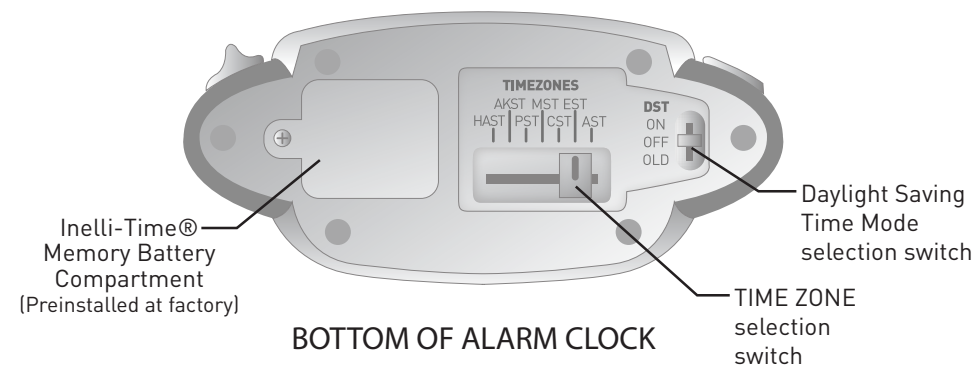

BOTTOM OF ALARM CLOCK

About Intelli-Time®

Your new alarm clock is equipped with Intelli-Time technology which is pre-programmed with the correct time and date. Intellitime instructs the clock to self set itself once batteries are installed. The Intelli-Time feature requires an internal memory battery to operate correctly. This battery is located in the Intelli-Time memory battery compartment on the bottom of the clock and is pre-installed at the factory. We suggest replacement of the backup battery every 5 years. We recommend the replacement of the backup battery in 1-2 years if the unit is not powered on for a long period of time. Do not replace the memory battery unless the clock is plugged in and the display is operating with the correct time.

3 • SETUP

Plug the AC power cord into a 110v AC power outlet.

CAUTION: To prevent electric shock, do not use this plug with an extension cord, receptacle, or any other outlet unless the blades can be fully inserted to prevent blade exposure.

WARNING: To prevent fire or shock hazard, do not expose the alarm clock to rain or moisture.

Basic Clock Setup

After plugging in the clock, the clock will be set to the proper time for the default time zone. Next, you will need to select your time zone for the clock to display your correct time. The time zone selection switch is located on the bottom of the alarm clock.

Another preference which may need to be set depending on your location is Daylight Saving Time (DST). Certain areas do not observe DST, and you may need to disable the DST setting (OFF). The DST selection switch is located on the bottom of the alarm clock.

Optional Custom Time Setting

If you wish to set the clock slightly ahead or slightly behind, or if the Intelli-Time internal memory battery is allowed to go dead, you may set the time and date simply by following the the custom setup procedure below:

1. Press AND HOLD the "clock set" button for 3 seconds, the HOUR will blink.
2. Press the "▼" or "▲" buttons to adjust the HOUR. Note the PM indicator.
3. Press the "clock set" button again to confirm your selection and move on to setting the MINUTES.
4. Press the "▼" or "▲" buttons to adjust the MINUTES.
5. Press the "setup" button again to confirm your time setting and move on to setting the calendar.
6. Set the Day, Month and Date in the same manner the time was set.
7. Press the "clock set" button to exit custom time setting mode.

4 • OPERATION



Alarm Clock Setting

To set the alarm time, press AND HOLD the "set alarm" button for 3 seconds to enter into alarm time set mode. The hour will flash.

2. Press the "▼" or "▲" buttons to adjust the hour, note the PM indicator.
3. Press the "set alarm" button to confirm hour selection and move on.
4. Press the "▼" or "▲" buttons to adjust the minutes.
5. Press the "set alarm" button to confirm and exit alarm time set mode.



Alarm Clock ON or OFF

TO TURN ALARM ON: slide the "Alarm on/off" switch to the right "ON" position.

ALARM ON INDICATION: the display will indicate "alarm on"

TO TURN ALARM OFF: slide the "Alarm on/off" switch to the left "OFF" position.



Alarm Clock SNOOZE function

When the alarm is sounding, you may activate the 8 minute SNOOZE function by firmly pressing down on the backlight/snooze area at the top of the alarm clock. The SNOOZE function may be activated up to 10 times.



Dimmer LO/HI

You may select dimmer LO or HI by sliding the "Dimmer" switch to the desired setting to optimize the display brightness for the location.



Volume LO/HI

You may select alarm volume level LO or HI by sliding the "Dimmer" switch to the desired setting to optimize the alarm volume for the location.

ACURITE
DESIGNED TO WORK FOR YOU™

Product Registration

To receive product information, register your product online. It's quick and easy!

Log on to http://www.chaneyinstrument.com/product_reg.htm



CAUTION

RISK OF ELECTRIC SHOCK-DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

